


CAVITY FIX

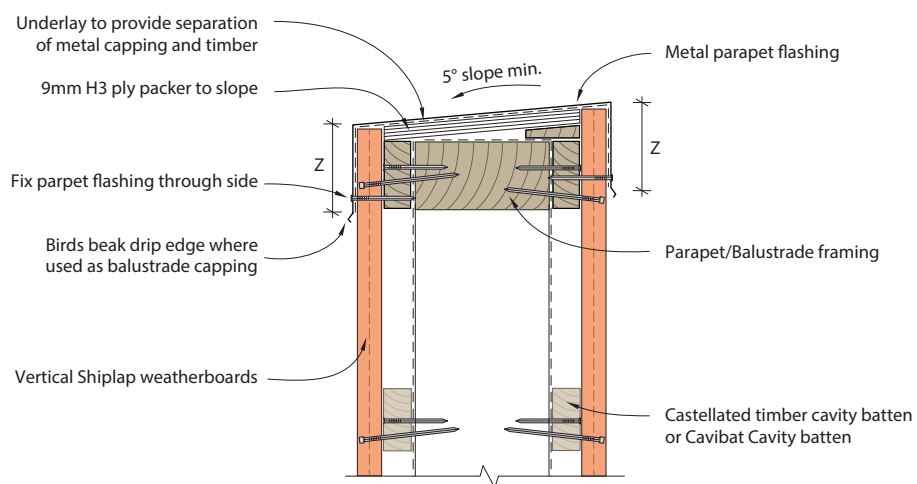

Note : Install flexible flashing tape and saddle flashing at junction with full height wall

Z = variable according to wind zone. Refer to E2/AS1 Table 7
parapet flashing to provide 50mm min. cover over weatherboards (70mm for very high wind zones)